SPECIFICATION

Graphic Type STN Dot Matrix LCD Module

JM24064B

JINGHUA JM24064B

● GENERAL SPECIFICATION

240 × 64 dot display

Toshiba LCD controller: T6963C

Toshiba LCD driver: T6A39 and T6A40

Interface with 8-bit MPU (directly connected to Z80 serial MPU)

Display Specification

Display Mode: graphic, text and combination text-graphic mode

Display Dot: 240 × 64

Display type: STN and FSTN

Display color-Display background color: Black-Yellow; Blue-Gray; White-Blue

Polarizer mode: Positive, Negative; Reflective , Transflective,Transmissive

Viewing angle: 6:00 and 12:00

Display duty: 1/64

Driving bias: 1/9

Selectable character font: 6 × 8 or 8 × 8

Memory and external memory:

A standard 128-word character generator ROM

8KB external display RAM (static RAM)

Mechanical characteristics(Unit:mm)

External dimension:180.0 X 75.0 X 10.0 (15.0 for LED Backlight)

188.0 X 75.0 X 15 for CCFL Backlight
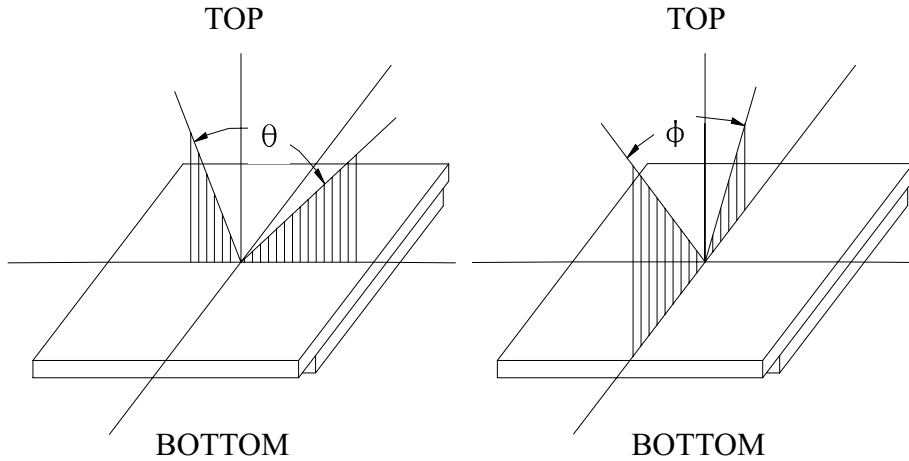
View area: 132.0 X 39.0

Dot size: 0.48 X 0.48

Dot pitch: 0.53 X 0.53

Weight:110g(150g for Bottom LED Backlight; 135g for Side LED Backlight;

150g for CCFL Backlight)

POWER: negative power, +5V power

JINGHUA   JM24064B

● **Optical Characteristics**

(1) Definition of viewing Angle

TOP   TOP

θ   φ

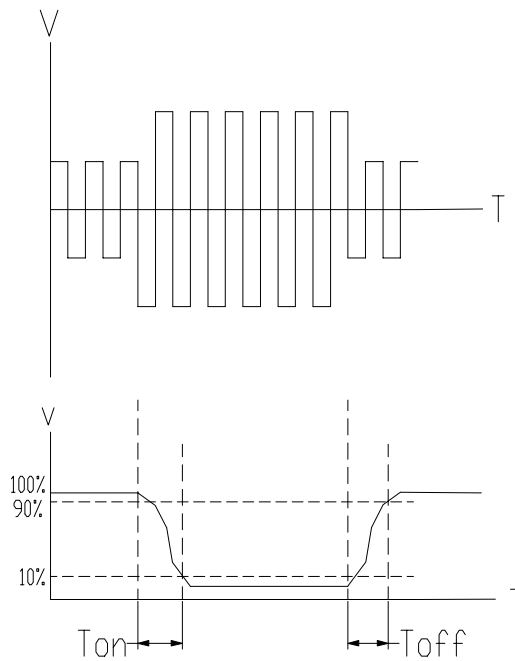BOTTOM   BOTTOM

(2) Definition of Contrast Ratio:

$$\text{Contrast Ratio} = \frac{\text{Reflectance value of non-selected state brightness}}{\text{Reflectance value of selected state brightness}}$$
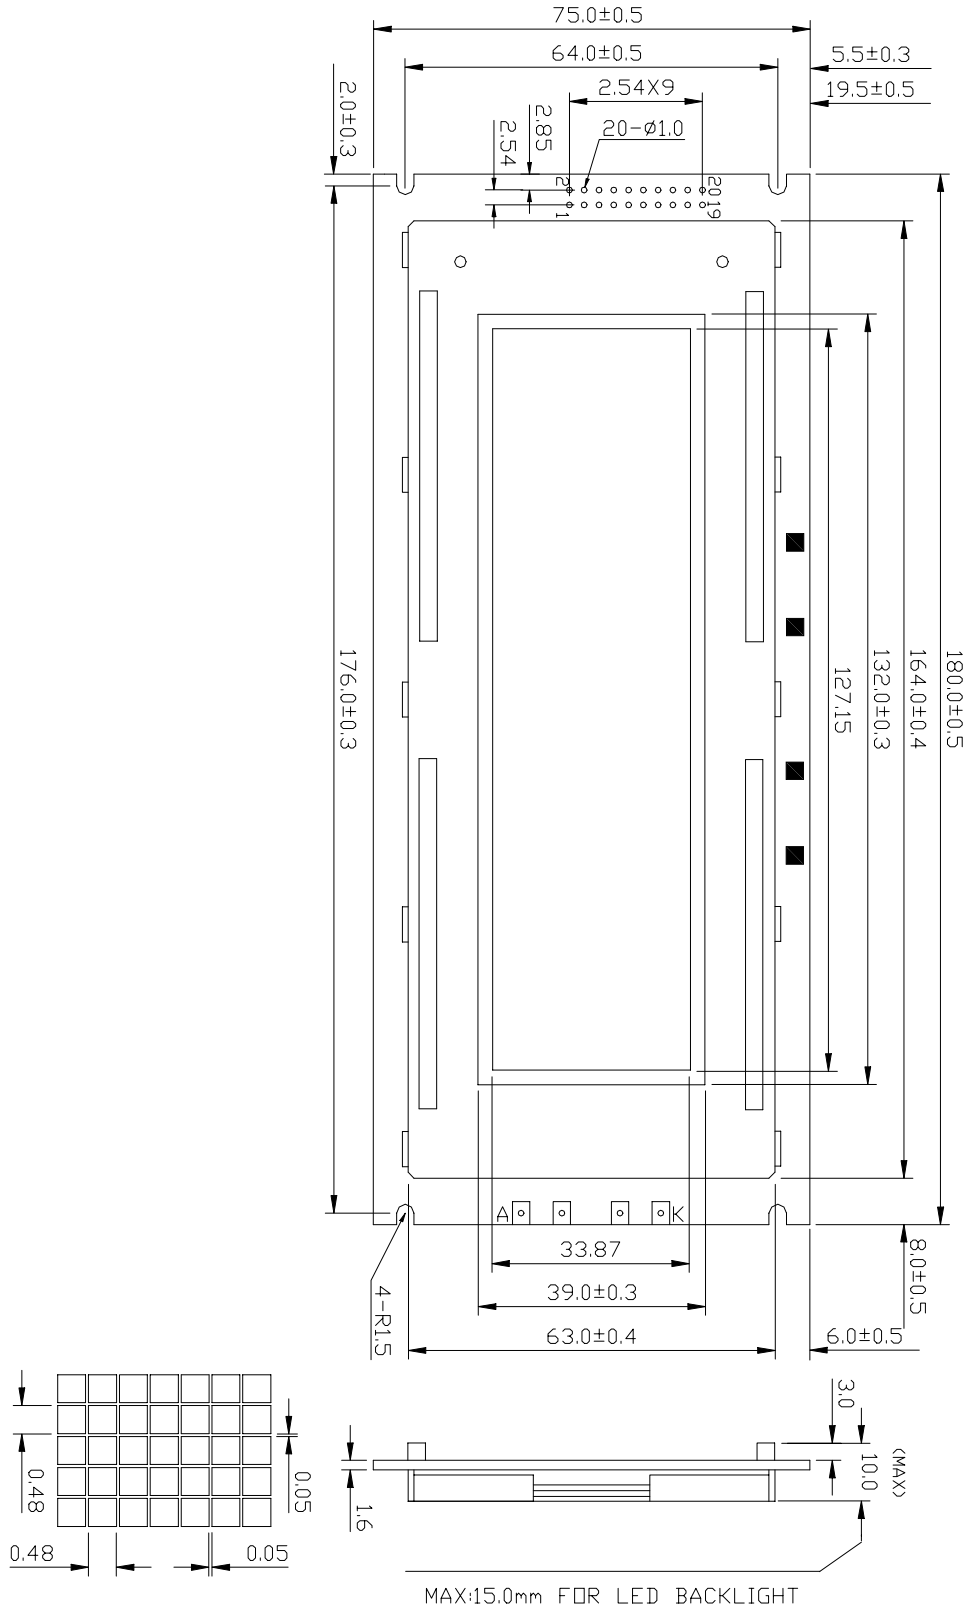
Test condition : standard A light source

(3) Response Time
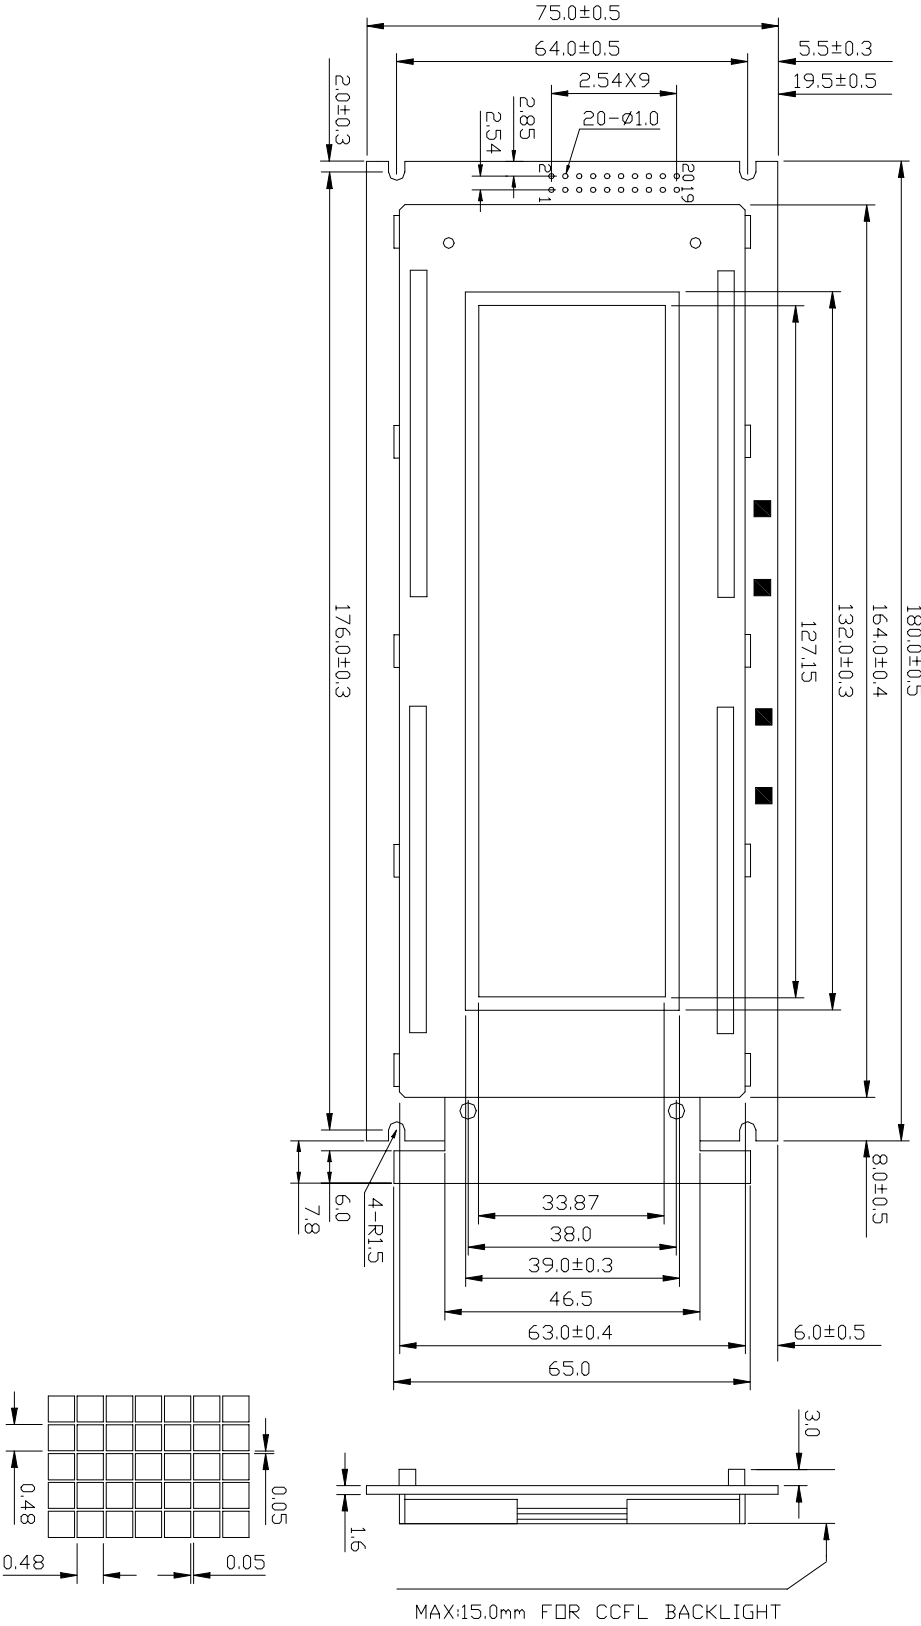
Response time is measured as the shortest period of time possible between the change in state of an LCD segment as demonstrated below

100%
90%

10%

Ton   Toff

● **External Dimension**(for Bottom and Side LED Backlight)

MAX:15.0mm FOR LED BACKLIGHT

● **External Dimension**(for CCFL Backlight)

Absolute Maximum Ratings For Side LED Backlight

Parameter	Symbol	Test condition	Min	Type	Max	Unit
LED Forward Consumption Current	I_f	Ta=25℃ Vf=4.1V		225	-	mA
LED Allowable Dissipation	P_d			920	-	mW

● **Absolute Maximum Ratings For Bottom LED Backlight**

Parameter	Symbol	Test condition	Min	Type	Max	Unit
LED Forward Consumption Current	I_f	Ta=25℃ Vf=4.1 V	-	520	-	mA
LED Allowable Dissipation	P_d		-	2500	-	mW

● **Absolute Maximum Ratings For CCFL Backlight**

Parameter	Symbol	Test condition	Min	Type	Max	Unit
Invertor input voltage	Vi	-	0	5	12	V(DC)
CCFL operating voltage	V_{CCFL}	-	200	-	800	V(AC)
CCFL operating current	If	-	-	5.5	-	mA
CCFL power Consumption	Pd	-	1.1		4.7	W

CCFL backlight must be applicated with CCFL backlight invertor(DC/AC invertor)

● **Absolute Maximum Ratings**

Item	Symbol	Condition	Standard Value		Unit
			Min	Max	
Supply Voltage for logic	Vdd		-0.3	7.0	V
Supply Voltage for LCD	Vee	Ta=25℃	Vdd-28	Vdd-8	V
Input Voltage	Vr		-0.3	Vdd+0.3	V
Operating Temperature	Top	-	0	50	℃
Storage Temperature	Tstg	-	-20	70	℃

● **Electrical Characteristics** (Ta=25℃, Vdd= 5.0V)

Item	Symbol	Condition	Standard Value			Unit
			Min	Type	Max	
Supply Voltage for logic	Vdd-Vss	-	4.5	5.0	5.5	V
Supply Current for logic	Idd	Vdd=5.0	-	8.6	-	mA
Driving Current for LCD	Iee	Vee=-7.8	-	4.0	-	mA
Driving Voltage for LCD	Vdd-Vee	25℃	-	12.8	-	V
Input Voltage"H" level	V_{IH}	H	Vdd-2.2	-	Vdd	V
Input Voltage "L" level	V_{IL}	L	0	-	0.8	V

● **Block Diagram**
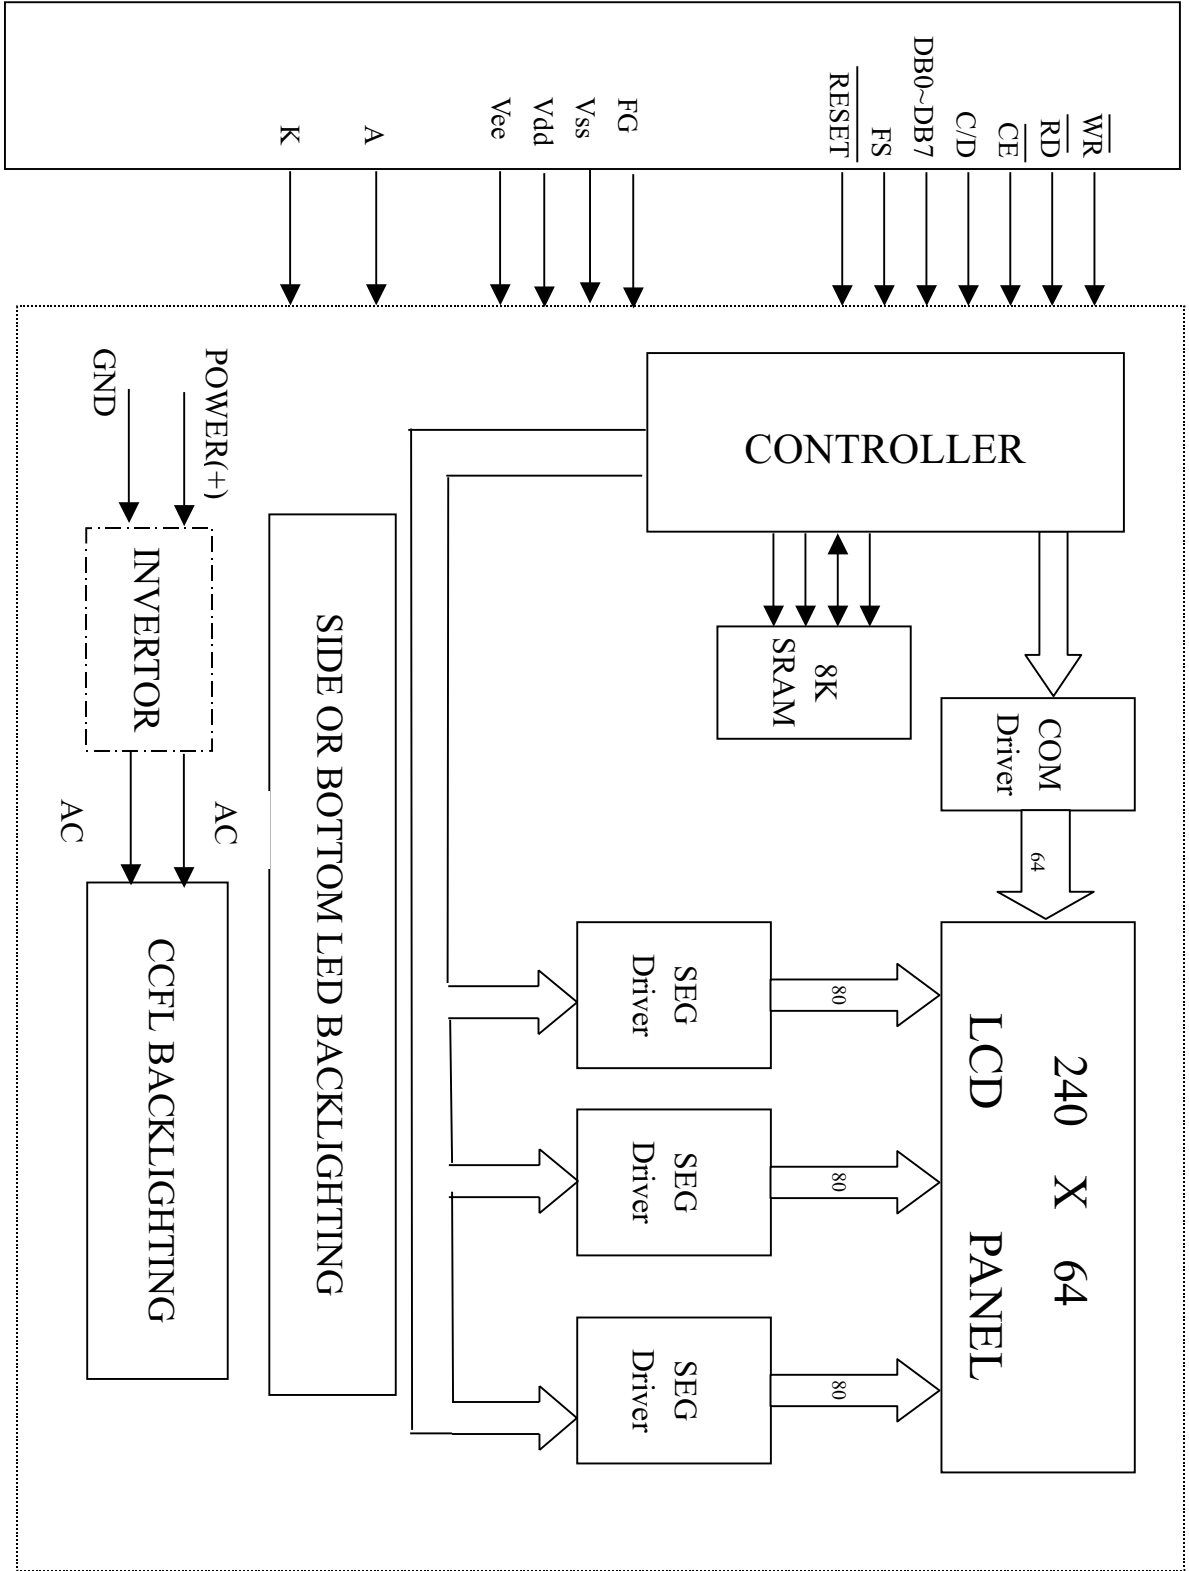
● Bus Timing
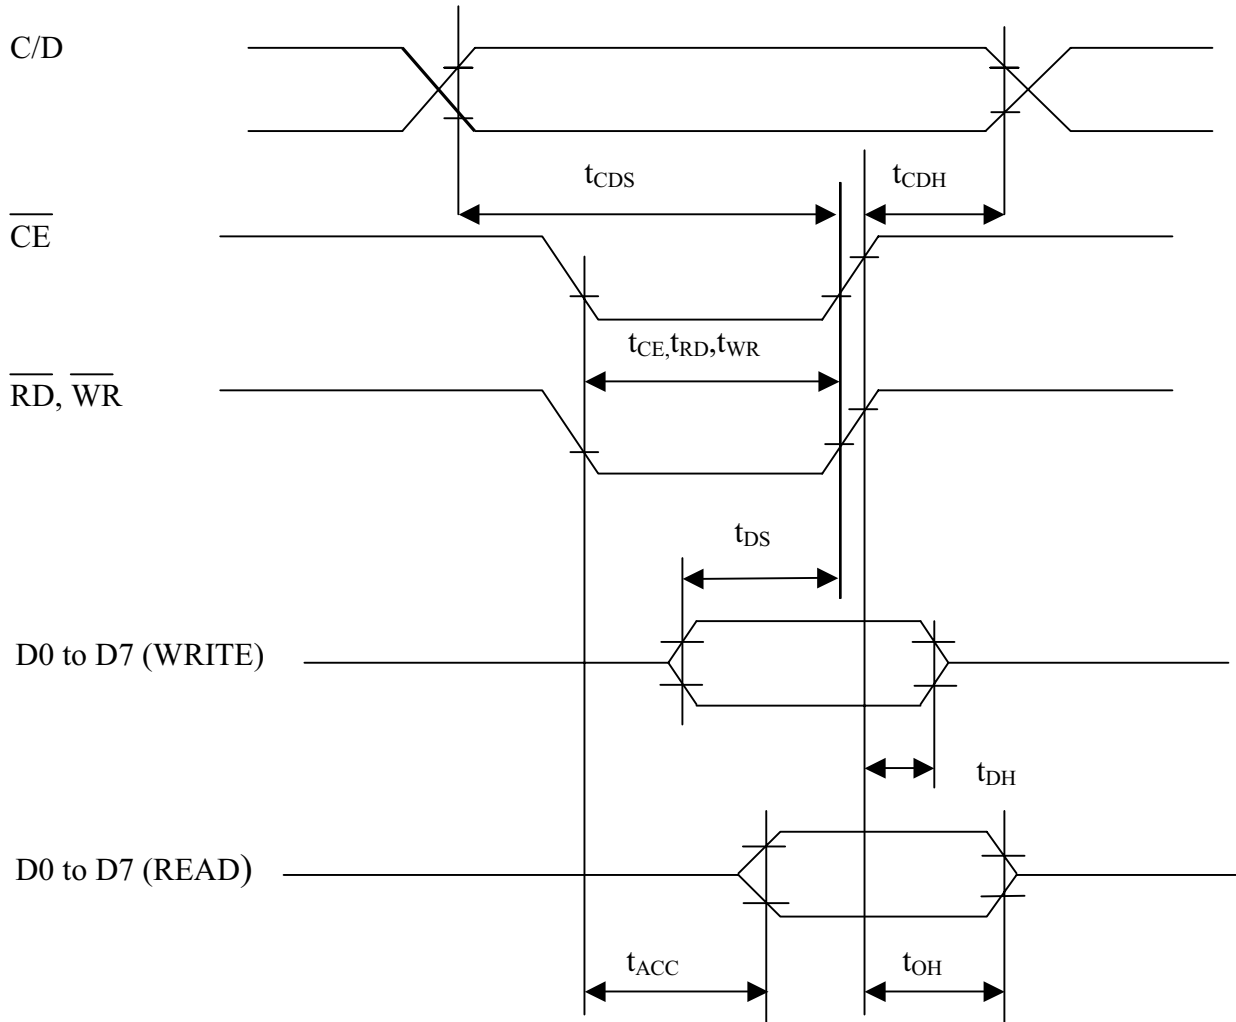
TEST CONDITIONS (Unless otherwise noted,Vdd=5.0V±10%,Vss=0V,Ta=-20 to 75℃)

ITEM	SYMBOL	MIN	MAX	UNIT
C/D Set-up Time	t_{CDS}	100	-	ns
C/D Hold Time	t_{CDH}	10	-	ns
$\overline{CE}$, $\overline{RD}$, $\overline{WR}$ Pulse Width	t_{CE}, t_{RD}, t_{WR}	80	-	ns
Data Set-up Time	t_{DS}	80	-	ns
Data Hold Time	t_{DH}	40	-	ns
Access Time	t_{ACC}	-	150	ns
Output Hold Time	t_{OH}	10	50	ns

● Pin assignment

Pin NO.	Symbol	Function		Remark
1	FG	Module Frame Ground		
2	Vss	Power Supply	0V	
3	Vdd		+5V	
4	Vee		For LCD	Variable
5	$\overline{WR}$	Data Write		
6	$\overline{RD}$	Data Read		
7	$\overline{CE}$	Chip Enable		
8	C/D	Command/Data Select		
9	$\overline{RESET}$	Reset Signal		
10	DB0	Data Bit 0		
11	DB1	Data Bit 1		
12	DB2	Data Bit 2		
13	DB3	Data Bit 3		
14	DB4	Data Bit 4		
15	DB5	Data Bit 5		
16	DB6	Data Bit 6		
17	DB7	Data Bit 7		
18	FS	Font Selection		
19	A	Anode of LED Unit		
20	K	Cathode of LED Unit		
	AC	Power for CCFL		
	AC	Power for CCFL		

● **Flowchart of communications with MPU**

Status Word

MSB							LSB
STA7 D7	STA6 D6	STA5 D5	STA4 D4	STA3 D3	STA2 D2	STA1 D1	STA0 D0

STA0	Check command execution capability	0:Disable 1:Enable
STA1	Check data read/write capability	0:Disable 1:Enable
STA2	Check Auto mode data read capability	0:Disable 1:Enable
STA3	Check Auto mode data write capability	0:Disable 1:Enable
STA4	Not used	
STA5	Check controller operation capability	0:Disable 1:Enable
STA6	Error flag. Used for Screen Peek and Screen copy commands	0:No error 1:Error
STA7	Check the blink condition	0:Dsiplay off 1:Normal display

Note1: A status check must be performed before data is read or written.

Note2: It is necessary to check STA0 and STA1 at the same time.
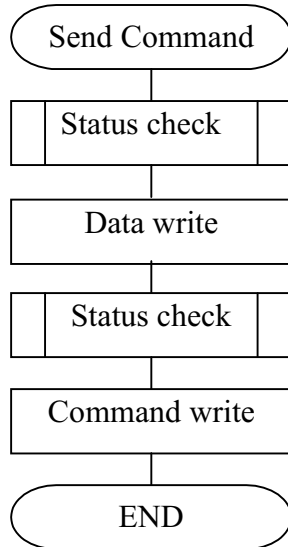
        There is a possibility of erroneous operation due to a hardware interrupt.

Note3: For most modes STA0/STA1 are used as a status check.

Note4: STA2 and STA3 are valid in Auto mode; STA0 and STA1 are invalid.

Setting Data

a) The case of 1 data   b) The case of 2 data

```
     ( Send Command )              ( Send Command )
            |                             |
     [ | Status check | ]          [ | Status check | ]
            |                             |
     [   Data write   ]            [   Data write   ]
            |                             |
     [ | Status check | ]          [ | Status check | ]
            |                             |
     [  Command write  ]           [   Data write   ]
            |                             |
        ( END )                    [ | Status check | ]
                                          |
                                   [  Command write  ]
                                          |
                                      ( END )
```
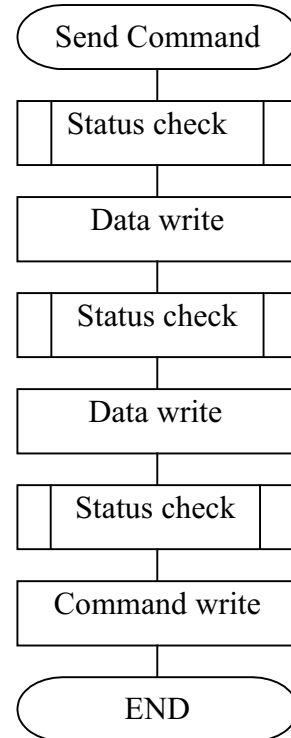
● **COMMAND DEFINITIONS**

COMMAND	CODE	D1	D2	FUNCTION
REGISTERS SETTING	00100001 00100010 00100100	X address Data Low address	Y address 00H High address	Set Cursor Pointer Set Offset Register Set Address Pointer
SET CONTROL WORD	01000000 01000001 01000010 01000011	Low address Columns Low address Columns	High address 00H High address 00H	Set Text Home Address Set Text Area Set Graphic Home Address Set Graphic Area

COMMAND	CODE	D1	D2	FUNCTION
MODE SET	1000X000	—	—	OR mode
	1000X001	—	—	EXOR mode
	1000X011	—	—	AND mode
	1000X100	—	—	Text Attribute mode
	10000XXX	—	—	Internal CG ROM mode
	10001XXX	—	—	External CG RAM mode
DISPLAY MODE	10010000	—	—	Display off
	1001XX10	—	—	Cursor on, blink off
	1001XX11	—	—	Cursor on, blink on
	100101XX	—	—	Text on, graphic off
	100110XX	—	—	Text off, graphic on
	100111XX	—	—	Text on, graphic on
CURSOR PATTERN SELECT	10100000	—	—	1-line cursor
	10100001	—	—	2-line cursor
	10100010	—	—	3-line cursor
	10100011	—	—	4-line cursor
	10100100	—	—	5-line cursor
	10100101	—	—	6-line cursor
	10100110	—	—	7-line cursor
	10100111	—	—	8-line cursor
DATA AUTO READ/WRITE	10110000	—	—	Set Data Auto Write
	10110001	—	—	Set Data Auto Read
	10110010	—	—	Auto Reset
DATA READ/WRITE	110000000	Data	—	Data Write and Increment ADP
	110000001	—	—	Data Read and Increment ADP
	11000010	Data	—	Data Write and Decrement ADP
	11000011	—	—	Data Read and Decrement ADP
	11000100	Data	—	Data Write and Non-variable ADP
	11000101	—	—	Data Read and Non-variable ADP
SCREEN PEEK	11100000	—	—	Screen Peek
SCREEN COPY	11101000	—	—	Screen Copy
BIT SET/RESET	11110XXX	—	—	Bit Reset
	11111XXX	—	—	Bit Set
	1111X000	—	—	Bit 0 (LSB)
	1111X001	—	—	Bit1
	1111X010	—	—	Bit2
	1111X011	—	—	Bit3
	1111X100	—	—	Bit4
	1111X101	—	—	Bit5
	1111X110	—	—	Bit6
	1111X111	—	—	Bit 7 (MSB)

Note: First set the data, then set the command.

● **Description of Command**

Setting Registers

(1) Set Cursor Pointer

The position of the cursor is specified by X ADRS and Y ADRS. The cursor position can only be moved by this command. Data read/write from the MPU never changes the cursor pointer.

X ADRS: 00H to 4FH(lower 7 bits are valid);   Y ADRS: 00H to 1FH(lower 5 bits are valid)

a) Single-Scan   b) Dual-Scan

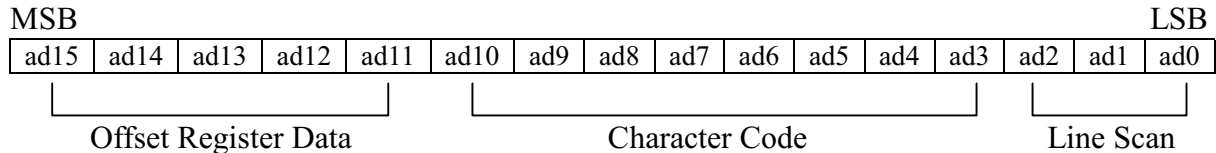X ADRS 00 to 4FH   X ADRS 00H to 4FH

| Y ADRS 00H to 0FH |

| Y ADRS 00H to 0FH |
| Upper screen |

| Y ADRS 10H to1FH |
| Lower screen |

(2) Set Offset Register

The offset register is used to determine the external character generator RAM area.

MSB   LSB

| ad15 | ad14 | ad13 | ad12 | ad11 | ad10 | ad9 | ad8 | ad7 | ad6 | ad5 | ad4 | ad3 | ad2 | ad1 | ad0 |

Offset Register Data   Character Code   Line Scan

The senior five bits define the start address in external memory of the CG RAM area. The next eight bits represent the character code of the character. In internal CG ROM mode, character codes 00H to 7FH represent the predefined "internal" CG ROM characters, and codes 80H to FFH represent the user's own "external" characters. In external CG RAM mode, all 256 codes from 00H to FFH can be used to represent the user's own characters.

The three least significant bits indicate one of the eight rows of eight dots that define the character's shape.

The relationship between display RAM address and offset register

Offset register data	CG RAM hex. Address (start to end)
00000	0000 to 07FFH
00001	0800 to 0FFFH
00010	1000 to 17FFH
11100	E000 to E7FFH
11101	E800 to EFFFH
11110	F000 to F7FFH
11111	F800 to FFFFH

Example1:

Offset register	02H
Character code	80H
Character generator RAM start address	0001 0100 0000 0000
	1 4 0 0 H

	(address)	(data)
	1400H	00H
	1401H	1FH
	1402H	04H
	1403H	04H
	1404H	04H
	1405H	04H
	1406H	04H
	1407H	00H
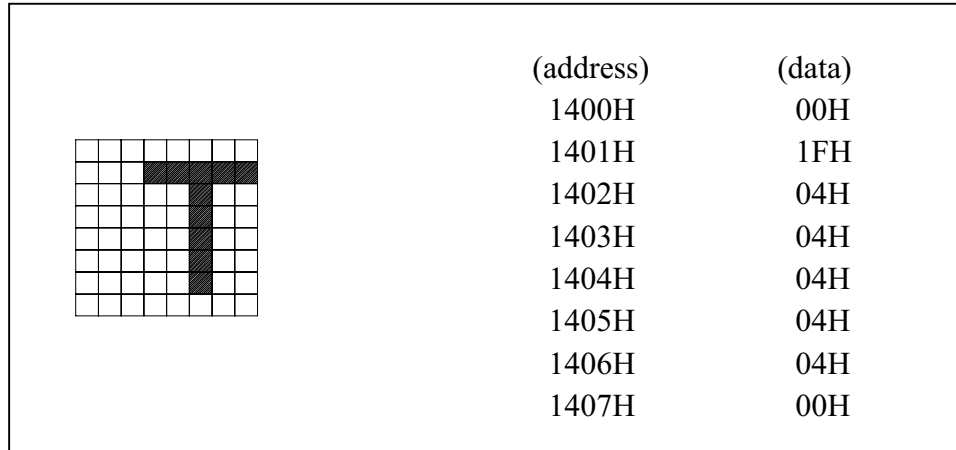
Example 2:

The relationship between display RAM data and display characters

AB γ DE ζ GHUKLM

Display   character

(RAM DATA)	(Character)
21H	A
22H	B
83H	γ
24H	D
25H	E
86H	ζ
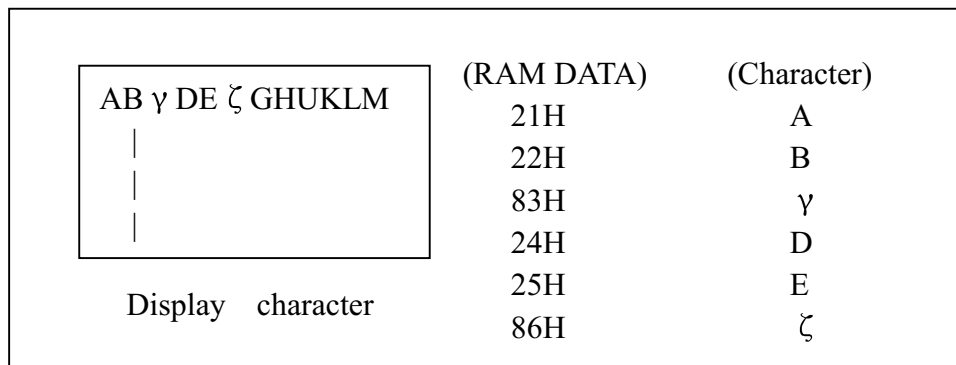
*   γ   and   ζ   are displayed by character generator RAM

(3) set Address Pointer

The Set Address Pointer command is used to indicate the start address for writing to (or reading from) external RAM.

The Flowchart for set Address Pointer command

```
                    ( Set Address Pointer )
                            |
                    [ ]  Status check  [ ]
                            |
                      Set Address data
                       (lower 8 bits)
                            |
                    [ ]  Status check  [ ]
                            |
                      Set Address data
                       (upper 8 bits)
                            |
                    [ ]  Status check  [ ]
                            |
Send Set Address Pointer command    Send command 24H
                            |
                        ( END )
```
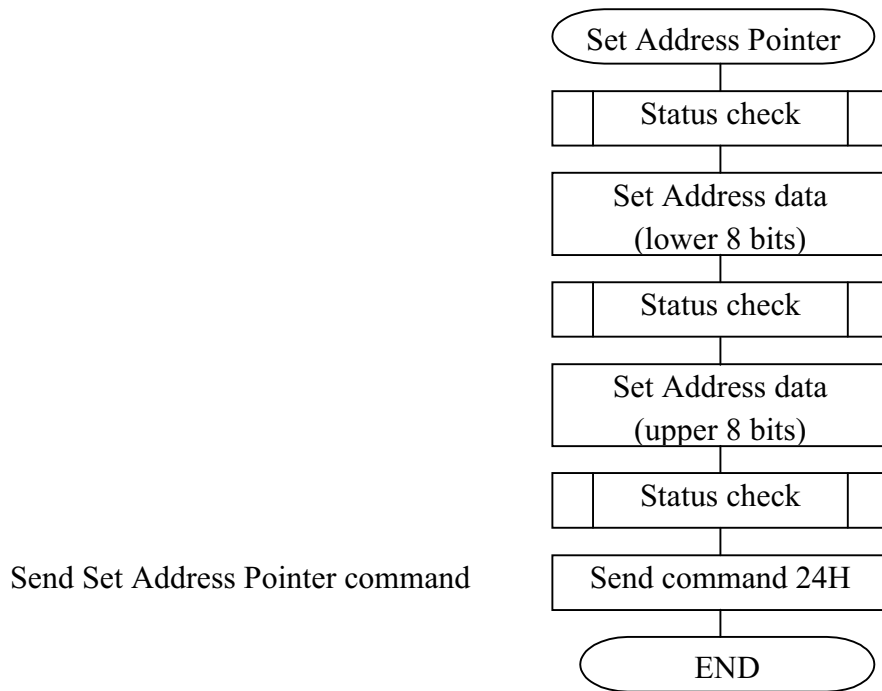
Set Control Word

The home address and column size are defined by this command.

(1) Set Text Home Address

The starting address in the external display RAM for text display is defined by this command. The text home address indicates the leftmost and uppermost position.

The relationship between external display RAM address and display position.

TH	-----------	TH+CL
TH+TA	-----------	TH+TA+CL
(TH+TA)+TA	-----------	TH+2TA+CL
------------	-----------	-----------
TH+(N-1)TA	-----------	TH+(N-1)TA+CL

TH: Text home address   TA: Text area number (columns)

CL: Columns are fixed by hardware (pin-programmable).

Example:

Text home address: 0000H   Text area: 0020H

MD2=H, MD3=H: 32 columns $\overline{DUAL}$=H, MDS=L, MD0=L, MD1=H: 4lines

0000H	0001H	----------	001EH	001FH
0020H	0021H	----------	003EH	003FH
0040H	0041H	----------	005EH	005FH
0060H	0061H	----------	007EH	007FH

(2) Set Graphic Home Address

The starting address of the external display RAM used for graphic display is defined by this command. The graphic home address indicates the leftmost and uppermost position. The relationship between external display RAM address and display position

GH	-----------	GH+CL
GH+GA	-----------	GH+GA+CL
(GH+GA)+GA	-----------	GH+2GA+CL
------------	-----------	-----------
GH+(N-1)GA	-----------	GH+(N-1)GA+CL

GH: Graphic home address   GA: Graphic area number (columns)

CL: Columns are fixed by hardware (pin-programmable).

Example:

Graphic home address: 0000H   Graphic area: 0020H

MD2=H, MD3=H: 32 columns $\overline{DUAL}$=H, MDS=L, MD0=H, MD1=H: 2lines

0000H	0001H	----------	001EH	001FH
0020H	0021H	----------	003EH	003FH
0040H	0041H	----------	005EH	005FH
0060H	0061H	----------	007EH	007FH
0080H	0081H	----------	009EH	009FH
00A0H	00A1H	----------	00BEH	00BFH
00C0H	00C1H	----------	00DEH	00DFH
00E0H	00E1H	----------	00FEH	00FFH
0100H	0101H	----------	011EH	011FH
0120H	0121H	----------	013EH	013FH
0140H	0141H	----------	015EH	015FH
0160H	0161H	----------	017EH	017FH
0180H	0181H	----------	019EH	019FH
01A0H	01A1H	----------	01BEH	01BFH
01C0H	01C1H	----------	01DEH	01DFH
01E0H	01E1H	----------	01FEH	01FFH

(3) Set Text Area

This command can be used to define the columns of the test display.

Example:

LCD size: 20 columns, 4lines   Text home address: 0000H

Text area: 0014H   MD2=H, MD3=H: 32 columns

$\overline{DUAL}$=H, MDS=L, MD0=L, MD1=H: 4lines

0000	0001	-------	0013	0014	-------	001F
0014	0015	-------	0027	0028	-------	0033
0028	0029	-------	003B	003C	-------	0047
003C	003D	-------	004F	0050	-------	005B

LCD DISPLAY

(4) Set Graphic Area

This command can be used define the columns of the graphic display.

Example: LCD size: 20 columns, 2lines   Graphic home address: 0000H

Graphic area: 0014H   MD2=H, MD3=H: 0014H

DUAL=H, MDS=L, MD0=H, MD1=H: 2lines

0000	0001	-------	0013	0014	-------	001F
0014	0015	-------	0027	0028	-------	0033
0028	0029	-------	003B	003C	-------	0047
003C	003D	-------	004F	0050	-------	005B
0050	0051	-------	0063	0064	-------	006F
0064	0065	-------	0077	0078	-------	0083
0078	0079	-------	008B	008C	-------	0097
008C	008D	-------	009F	00A0	-------	00AB
00A0	00A1	-------	00B3	00B4	-------	00BF
00B4	00B5	-------	00C7	00C8	-------	00D3
00C8	00C9	-------	00DB	00DC	-------	00E7
00DC	00DD	-------	00EF	00F0	-------	00FD
00F0	00F1	-------	0103	0104	-------	011F
0104	0105	-------	0127	0128	-------	0123
0128	0129	-------	013B	013C	-------	0147
013C	013D	-------	014F	0150	-------	015B

LCD DISPLAY

Mode Set

The display mode does not change until the next command is sent. In Internal Character Generator mode, character codes 00H to 7FH are assigned to the built-in character generator RAM. The character codes 80H to FFH are automatically assigned to the external character generator RAM.

Example: (Note: Attribute functions can only be applied to text display, since the attribute data is placed in the graphic RAM area.)
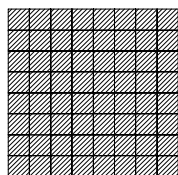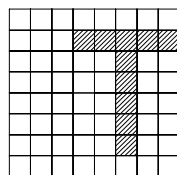
GRAPHIC   TEXT
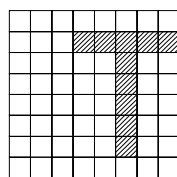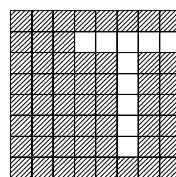
" OR "   "AND "   " EXOR "

Attribute Function

The attribute operations are Reverse display, Character blink and inhibit. The attribute data is written into the graphic area which was defined by the Set Control Word command. Only text display is possible in Attribute function mode; graphic display is automatically 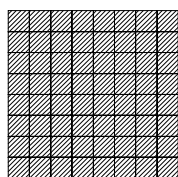disabled. However, the Display Mode command must be used to turn both Text and Graphic on in order for the Attribute function to be available.

Attribute RAM 1byte

X	X	X	X	d3	d2	d1	d0

d3	d2	d1	d0	FUNCTION
0	0	0	0	Normal display
0	1	0	1	Reverse display
0	0	1	1	Inhibit display
1	0	0	0	Blink of normal display
1	1	0	1	Blink of reverse display
1	0	1	1	Blink of inhibit of display

X: invalid

Display Mode

It is necessary to turn on "Text display" and "Graphic display" in the following cases.
a) Combination of text/graphic display
b) Attribute function

Cursor Pattern Select

When cursor display is ON, this command selects the cursor pattern in the range 1 line to 8lines. The cursor address is defined by the Cursor Pointer Set command.
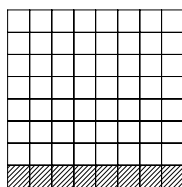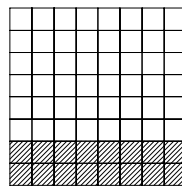
1-line cursor   2-line cursor   8-line cursor
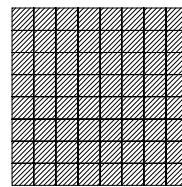
Data Auto Read/Write

   This command is convenient for sending a full screen of data from the external display RAM. After setting Auto mode, a Data Write (or Read) command is need not be sent between each datum. A Data Auto Write (or Read) command must be sent after a Set Address Pointer command. After this command, the address pointer is automatically incremented by 1 after each datum. In Auto mode, the LCM cannot accept any other commands. The Auto Rest command must be sent to the LCM after all data has been sent, to clear Auto mode.

Data Read/Write

   This command is used for writing data from the MPU to external display RAM, and reading data from external display RAM to the MPU. Data Write/Read should be executed after setting address using Set Address Pointer command. The address pointer can be automatically incremented or decrement using this command.

  Note : This command is necessary for each 1-byte datum.
          Refer to the following flowchart

```
            ( Data write start )
                    |
           | Set Address Pointer |
                    |
           |   Status check 1    |
                    |
           |    Set write data   |
                    |
           |   Status check 1    |
                    |
           |   Data write C0H    |
                    |
               (   END   )
```
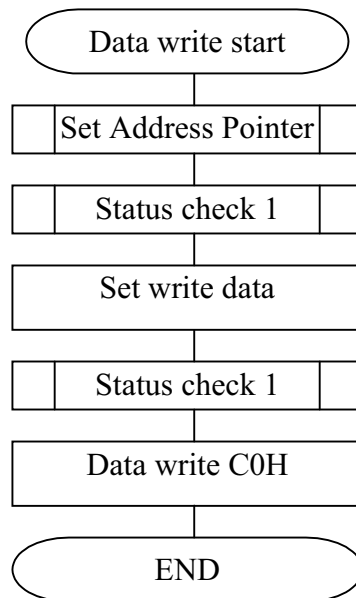
Screen Peek

The command is used to transfer 1 byte of displayed data to the data stack ; this byte can then be read from the MPU by data access. The logical combination of text and graphic display data on the LCD screen can be read by this command.

The status (STA6) should be checked just after the Screen Peek command. If the address determined by the Set Address Pointer command is not in the graphic area, this command is ignored and a status flag (STA6) is set.

Refer to the following flowchart

Note: This command is available when hardware column number and software column number are the same. Hardware column number is related to MD2 and MD3 setting.

Software column number is related to Set Text Area and Set Graphic Area command.

```
         ┌──────────────────────┐
         │   Screen Peek start  │
         └──────────────────────┘
                    │
         ┌──────────────────────┐
         │  Set Address Pointer │
         └──────────────────────┘
                    │
         ┌──────────────────────┐
         │    Status check 1    │
         └──────────────────────┘
                    │
         ┌──────────────────────┐
         │   Screen peek E0H    │
         └──────────────────────┘
                    │
   NO              ◇
   ┌──────────────( * )──────────   (*)   Status check STA6=0?
   │                    │  YES
         ┌──────────────────────┐
         │    Status check 1    │
         └──────────────────────┘
                    │
         ┌──────────────────────┐
         │     Data access      │
         └──────────────────────┘
                    │
         ┌──────────────────────┐
         │         END          │
         └──────────────────────┘
```
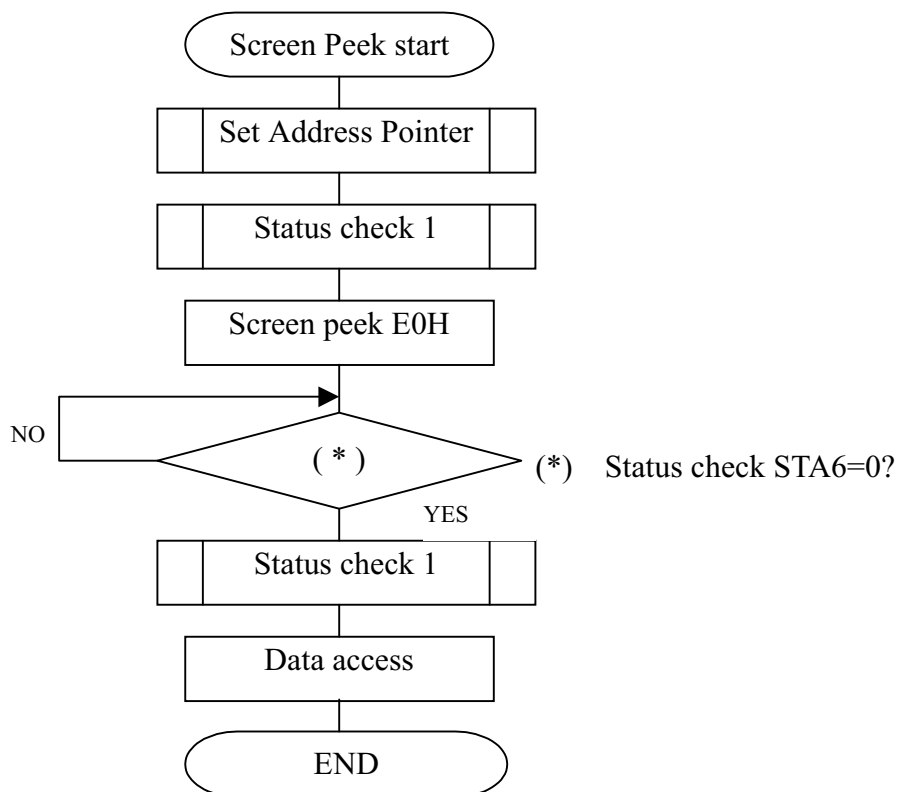
(**Note**) This command is available when hardware column number and software column number are the same. Hardware column number is related to MD2 and MD3 setting.

Software column number is related to Set Text Area and Set Graphic Area command.

Screen Copy

This command copies a single raster line of data to the graphic area.
The start point must be set using the Set Address Pointer command.

Refer to the following flowchart

```
              ┌─────────────────────┐
              │  Screen copy start  │
              └─────────────────────┘
                        │
         ┌──────────────┼──────────────┐
         │     ┌─────────────────┐
         │     │ Set Address Pointer │
         │     └─────────────────┘
         │              │
         │     ┌─────────────────┐
         │     │  Status check 1 │
         │     └─────────────────┘
         │              │
         │     ┌─────────────────┐
         │     │ Screen copy E8H │
         │     └─────────────────┘
         │              │
  YES    │         ╱────────╲                     (*1) Status check STA6=1
         └────────<   (*1)   >                     (*2) Status check STA0/1=1
                   ╲────────╱       NO
                        │ NO
                   ╱────────╲
                  <   (*2)   >──────────┘
                   ╲────────╱
                        │ YES
              ┌─────────────────┐
              │       END       │
              └─────────────────┘
```
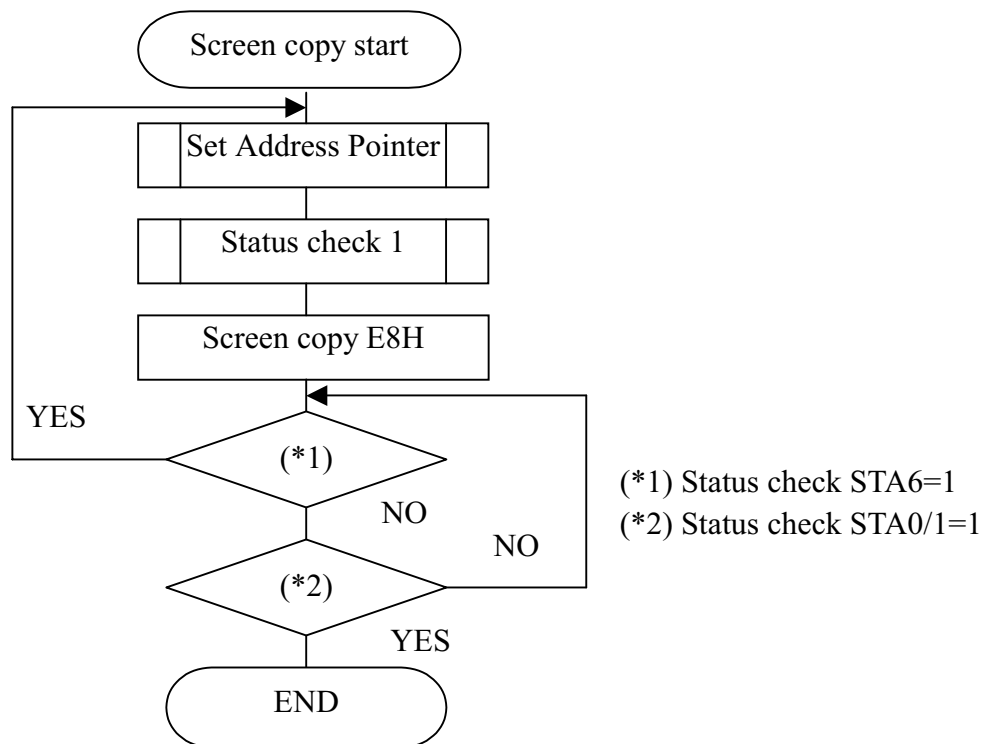
Note1: If the attribute function is being used, this command is not available.(With Attribute data is graphic area data)
Note2: With Dual-Scan, this command cannot be used (because the LCM cannot separate the upper screen data and lower screen data).
Note3: This command is available when hardware column number and software column number are the same.

Bit Set/Reset

This command use to set or reset a bit of the byte specified by the address pointer. Only one bit can be set/rest at a time.

Refer to the following flowchart:

```
        ┌─────────────────────┐
        │    Bit Set/Reset    │
        └─────────────────────┘
                   │
        ┌──┬─────────────────┬──┐
        │  │Set Address Pointer│ │
        └──┴─────────────────┴──┘
                   │
        ┌──┬─────────────────┬──┐
        │  │ Status check 1  │  │
        └──┴─────────────────┴──┘
                   │
        ┌─────────────────────┐
        │    Set write data   │
        └─────────────────────┘
                   │
        ┌──┬─────────────────┬──┐
        │  │ Status check 1  │  │
        └──┴─────────────────┴──┘
                   │
        ┌─────────────────────┐
        │   Bit set ( reset)  │
        └─────────────────────┘
                   │
        ┌─────────────────────┐
        │         END         │
        └─────────────────────┘
```
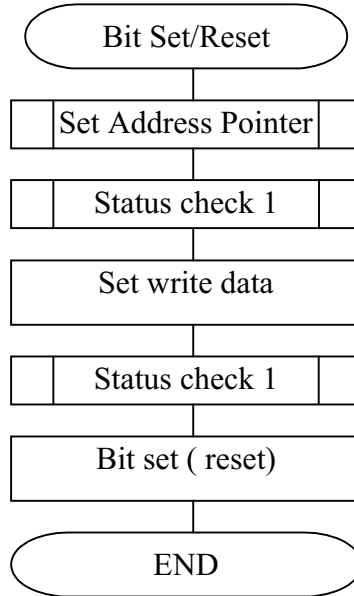
● **Application Example**

Application Circuit

LCD MODULE		8031 (6M Hz)
	$\overline{WR}$	P3.0
	$\overline{RD}$	P3.1
	$C/\overline{D}$	P3.2
	$\overline{RESET}$	P3.4
	FS	P3.5
	D0~D7	P1.0~P1.7
	Vdd	Vdd
	$\overline{Vss}$	Vss
	$\overline{CE}$	
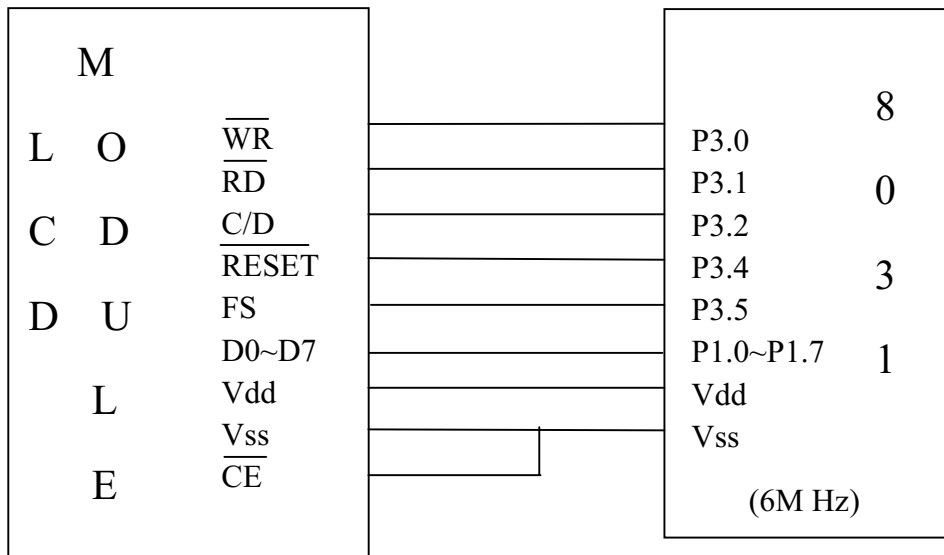
Program Example

```
;********************THIS IS 51 PROGRAM(24064)********************
;    P3.0    P3.1    P3.2    P3.4    P3.5
;    WR      RD      C/D     SET     FS1
;****************************************************************
;
    WR      EQU     P3.0
    RD      EQU     P3.1
    C/D     EQU     P3.2
    SET     EQU     P3.4
    FS1     EQU     P3.5
    X       EQU     30H
    Y       EQU     31H
;****************************************************************
;
ORG     0000H


        SETB    SET
        MOV     R5,#01H
REST:   CLR     SET
        LCALL   T1
        SETB    SET
        LCALL   T1
        DJNZ    R5,REST
        SETB    WR
        SETB    RD
        SETB    C/D
        CLR     FS1
;-------------------INIT SET 0
MAIN:   LCALL AA3
        MOV     P1,#00H
        LCALL   DAT
        MOV     P1,#00H
        LCALL   DAT
        MOV     P1,#42H
        LCALL   INS
        MOV     R6,#40H
;------------------------CLEAR    00
        MOV     P1,#98H
        LCALL   INS
        MOV     P1,#80H
        LCALL   INS
        LCALL   AA3
```

```
        MOV      R6,   #80H
LOOP1: MOV    DPTR, #TAB6
        LCALL    A5
        DJNZ     R6,   LOOP1
        MOV    P1,#00H
        LCALL    DAT
        MOV    P1,#00H
        LCALL    DAT
        MOV    P1,#24H
        LCALL    INS
        MOV    P1,#0F0H
        LCALL    INS
;-------------------------FULL GRAP;
        MOV    P1,#98H
        LCALL    INS
        MOV    P1,#80H
        LCALL    INS
        LCALL    AA3
        MOV    R6,   #80H
LOOP2: MOV    DPTR, #TAB5
        LCALL    A5
        DJNZ     R6,   LOOP2
;-------------------------ONE MEI HUA
        MOV      P1, #98H
        LCALL      INS
        MOV      P1, #80H
        LCALL      AA3
        MOV      R6, #40H
LOP:   MOV      DPTR,#TAB7
        LCALL      AAA5
        DJNZ       R6,  LOP
;-------------------------CLP ONE MEI HUA
        MOV      P1, #98H
        LCALL      INS
        MOV      P1, #80H
        LCALL      AA3
        MOV      R6, #40H
LOP24: MOV      DPTR,#TAB8
        LCALL      AAA5
        DJNZ       R6, LOP24
;-------------------------FOUR MEI HUA
```

```
        CLR     FS1
        MOV     P1, #98H
        LCALL    INS
        MOV     P1, #80H
        LCALL    AA3
        MOV     R6, #20H
LOP23:  MOV     DPTR,#TAB9
        LCALL    AAA6
        DJNZ     R6, LOP23
;--------------------------CLP FOUR MEI HUA
        CLR     FS1
        MOV     P1, #98H
        LCALL    INS
        MOV     P1, #80H
        LCALL    AA3
        MOV     R6, #20H
LOP22:  MOV     DPTR,#TB10
        LCALL    AAA6
        DJNZ     R6, LOP22
;--------------------------DISP 1,2,3...
;--------------------------SETB 1BYTE,CURSOR ON
        SETB    FS1
        MOV   P1,#97H
        LCALL    INS
        MOV   P1,#80H
        LCALL    INS
        MOV   P1,#0A7H
        LCALL    INS
        MOV   Y, #00H
        LCALL    AA1
        MOV   R6, #10H
LOOP3:  MOV   DPTR, #TAB1
        LCALL    AA5
        INC    Y
        DJNZ     R6, LOOP3
        MOV   P1,#27H
        LCALL    DAT
        MOV   P1,#0FH
        LCALL    DAT
        MOV   P1,#21H
        LCALL    INS
```

```
        MOV   P1,#00H
        LCALL   DAT
        MOV   P1,#10H
        LCALL   DAT
        MOV   P1,#24H
        LCALL   INS
        MOV   P1,#0FAH
        LCALL   INS
        LCALL   T3
;-------------------------SET ATTRBUTE,THREE MODE
        MOV   P1,#98H
        LCALL   INS
        MOV   P1,#80H
        LCALL   INS
        LCALL   AA3
        MOV   R6,  #0C8H
LOOP4:  MOV   P1,#05H
        LCALL   DAT
        MOV   P1,#0C0H
        LCALL   INS
        DJNZ    R6,   LOOP4
        MOV   R6,  #0C8H
LOOP5:  MOV   P1,#08H
        LCALL   DAT
        MOV   P1,#0C0H
        LCALL   INS
        DJNZ    R6,   LOOP5
        MOV   R6,  #0F0H
LOOP6:  MOV   P1,#03H
        LCALL   DAT
        MOV   P1,#0C0H
        LCALL   INS
        DJNZ    R6,   LOOP6
        MOV   P1,#9CH
        LCALL   INS
        MOV   P1,#84H
        LCALL   INS
        LCALL   T3
        LCALL   T3
;------------------------20 CHAR MOVE
        MOV   R6,   #14H
```

```
            MOV    R3,   #00H
LOOP7: MOV    P1,R3
            LCALL    DAT
            MOV    P1,#18H
            LCALL    DAT
            MOV    P1,#40H
            LCALL    INS
            INC    R3
            DJNZ    R6,   LOOP7
            LCALL    T3
;--------------------------DISPLAY SHEN ZHEN JING HUA
            CLR    FS1
            LCALL    AAAA
            MOV    P1,#00H
            LCALL    DAT
            MOV    P1,#00H
            LCALL    DAT
            MOV    P1,#24H
            LCALL    INS
            MOV    R6,   #80H
            MOV    DPTR, #TAB11
LOPP2: LCALL    ZZZ
            DJNZ    R6,   LOPP2
            AJMP    MAIN
;------------------------------------------
ZZZ:    CLR    A
            MOV    R5,   #1EH
ZZZZ:   CLR    C/D
            CLR    A
            MOVC    A, @A+DPTR
            MOV    P1,A
            CLR    WR
            SETB    WR
            LCALL    T1
            INC    DPTR
            SETB    C/D
            MOV    P1,#0C0H
            CLR    WR
            SETB    WR
            DJNZ    R5,   ZZZZ
            RET
```

```
;***************************
;
DAT:    CLR   C/D
        CLR   WR
        SETB  WR
        RET
INS:    SETB  C/D
        CLR   WR
        SETB  WR
        LCALL  T1
        RET
AA1:    MOV  P1,#0FFH  ;SET CHAR MODE
        LCALL  DAT
        MOV  P1,#17H
        LCALL  DAT
        MOV  P1,#40H
        LCALL  INS
        MOV  P1,#0FFH
        LCALL  DAT
        MOV  P1,#17H
        LCALL  DAT
        MOV  P1,#24H
        LCALL  INS
        MOV  P1,#28H
        LCALL  DAT
        MOV  P1,#00H
        LCALL  DAT
        MOV  P1,#41H
        LCALL  INS
        RET
AA3:    MOV  P1,#00H  ;SET GRAPHIC MODE
        LCALL  DAT
        MOV  P1,#00H
        LCALL  DAT
        MOV  P1,#42H
        LCALL  INS
        MOV  P1,#00H
        LCALL  DAT
        MOV  P1,#00H
        LCALL  DAT
        MOV  P1,#24H
        LCALL  INS
```

```
        MOV   P1,#28H
        LCALL   DAT
        MOV   P1,#00H
        LCALL   DAT
        MOV   P1,#43H
        LCALL   INS
        RET
AAAA:   MOV   P1,#98H
        LCALL   INS
        MOV   P1,#80H
        LCALL   INS
        MOV   P1,#00H
        LCALL   DAT
        MOV   P1,#00H
        LCALL   DAT
        MOV   P1,#24H
        LCALL   INS
        MOV   P1,#1EH
        LCALL   DAT
        MOV   P1,#00H
        LCALL   DAT
        MOV   P1,#43H
        LCALL   INS
        RET
AA5:    CLR   A        ;MOV 40 BYTE
        MOV   R5,#28H
        MOV   X,#00H
CDJ2:   CLR   A
        INC   X
        MOVC   A,@A+DPTR
        MOV   P1,A
        LCALL   DAT
        MOV   P1,#0C0H
        INC   DPTR
        LCALL   INS
        MOV   P1,X
        LCALL   DAT
        MOV   P1,Y
        LCALL   DAT
        MOV   P1,#21H
        LCALL   INS
```

```
             DJNZ    R5,CDJ2
             RET
;************************
A5:     CLR     A
        MOV     R5,#28H
ADJ2:   CLR     C/D
        CLR     A
        MOVC    A,@A+DPTR
        MOV     P1,A
        CLR     WR
        SETB    WR
        LCALL   T1
        INC     DPTR
        SETB    C/D
        MOV     P1,#0C0H
        CLR     WR
        SETB    WR
        DJNZ    R5,ADJ2
        RET
;***************************
AAA5:   CLR     A
        MOV     R5,    #50H
ZDJ2:   CLR     C/D
        CLR     A
        MOVC    A,     @A+DPTR
        MOV     P1,    A
        CLR     WR
        SETB    WR
        LCALL   T1
        INC     DPTR
        SETB    C/D
        MOV     P1,    #0C0H
        CLR     WR
        SETB    WR
        DJNZ    R5,    ZDJ2
        RET
;***************************
AAA6:   CLR     A
        MOV     R5,    #0A0H
ZDJ6:   CLR     C/D
        CLR     A
```

```
        MOVC    A,      @A+DPTR
        MOV     P1,     A
        CLR     WR
        SETB    WR
        LCALL   T1
        INC     DPTR
        SETB    C/D
        MOV     P1,     #0C0H
        CLR     WR
        SETB    WR
        DJNZ    R5,     ZDJ6
        RET
```

```
.******************************************************************
;
;                         DELAY 1MS
.******************************************************************
;
T2:     MOV   R7,#04H
TTT2:   MOV   R2,#0FFH
TTT1:   DJNZ  R2,TTT1
        DJNZ  R7,TTT2
        RET
.******************************************************************
;
;                         DELAY   64MS
.******************************************************************
;
T3:     MOV   R7,#0FFH
TTT3:   MOV   R2,#0FFH
TTT4:   DJNZ  R2,TTT4
        DJNZ  R7,TTT3
        RET
.******************************************************************
;
;                         DELAY 0.25MS
.******************************************************************
;
T1:     MOV   R7,#01H
TT2:    MOV   R2, #0FH
TT1:    DJNZ  R2,TT1
        DJNZ  R7,TT2
        RET
.******************************************************************
;
;                         DELAY   2S
.******************************************************************
;
T4:     MOV   R7, #20H
TTTT3:  MOV   R2,#0FFH
```

```
TTTT2:  MOV    R3,#0FFH
TTTT1:  DJNZ   R3,TTTT1
        DJNZ   R2,TTTT2
        DJNZ   R7,TTTT3
        RET
;************************************************************************
TAB1:DB 11H,12H,13H,14H,15H,16H,17H,18H
     DB 19H,21H,22H,23H,24H,25H,26H,27H
     DB 28H,29H,2AH,2BH,2CH,2DH,2EH,2FH
     DB 30H,31H,32H,33H,34H,35H,36H,37H
     DB 38H,39H,3AH,3BH,3CH,3DH,3EH,3FH
TAB5:DB 0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
     DB 0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
     DB 0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
     DB 0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
     DB 0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH,0FFH
TAB6:DB 00H,00H,00H,00H,00H,00H,00H,00H
     DB 00H,00H,00H,00H,00H,00H,00H,00H
     DB 00H,00H,00H,00H,00H,00H,00H,00H
     DB 00H,00H,00H,00H,00H,00H,00H,00H
     DB 00H,00H,00H,00H,00H,00H,00H,00H
TAB7:DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
     DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
     DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
     DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
     DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
     DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
     DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
     DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
TAB8:DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
     DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
     DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
     DB 55H,55H,55H,55H,55H,55H,55H,55H,55H,55H
     DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
     DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
     DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
     DB 0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH,0AAH
TAB9:DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
     DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
     DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
     DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
```
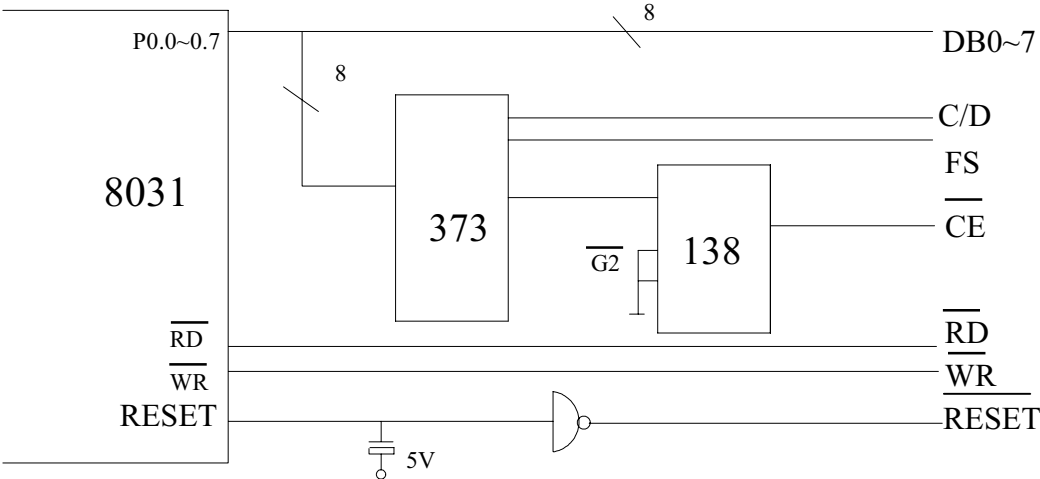
```
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
TB10:DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 33H,33H,33H,33H,33H,33H,33H,33H,33H,33H
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH
    DB 0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH,0CCH

    END
```

● Application Circuit

● **Character Code Map**

ROM Code 0101